

Cala
Club armchair
Teak legs
by Doshi Levien

kettal

Club armchair

Teak legs

Designer
Doshi Levien

Collection
Cala

Reference
KS2700600


1/2

This armchair features a unique and eye-catching design that seamlessly blends organic elements with modern aesthetics. One of the defining features of the Cala Dining Armchair is its intricate rope pattern, which envelops the seat and backrest. This pattern resembles a delicate net, reminiscent of traditional craftsmanship and natural motifs. It adds a touch of sophistication and warmth to any dining space, whether indoors or outdoors.

cm/inch


152,3/59,9

39,3/15,4

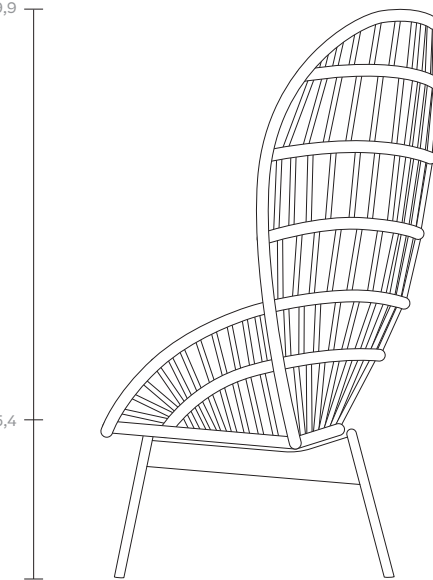

cm/inch

82,5/32,4

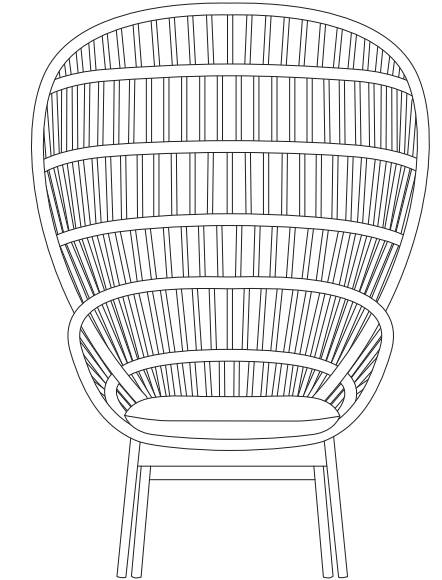

105,2/41,4



kettal

Club armchair

Teak legs

Designer
Doshi Levien

Collection
Cala

Reference
KS2700600

2/2

Fabric Maintenance

Clean with mild soap using a sponge or cloth. Be gentle during the cleaning process; avoid aggressive scrubbing of the fabric. After cleaning, ensure you remove any excess soap.

For stubborn stains, use diluted household bleach. Act promptly to clean stains; the longer they linger, the more challenging they become to remove.

After cleaning, steam iron the fabric using only steam. Be cautious not to place the iron directly on the fabric, as it may cause damage.

Teak Maintenance

We recommend treating the wood with sealer every three months, or more frequently in the case of hotel and catering establishments. To restore the teak to its original appearance, sand the entire surface and apply the sealer.

Finishes

[Click here](#) or scan the following QR code.



kettal